


Schöck Isokorb® XT/T type Q


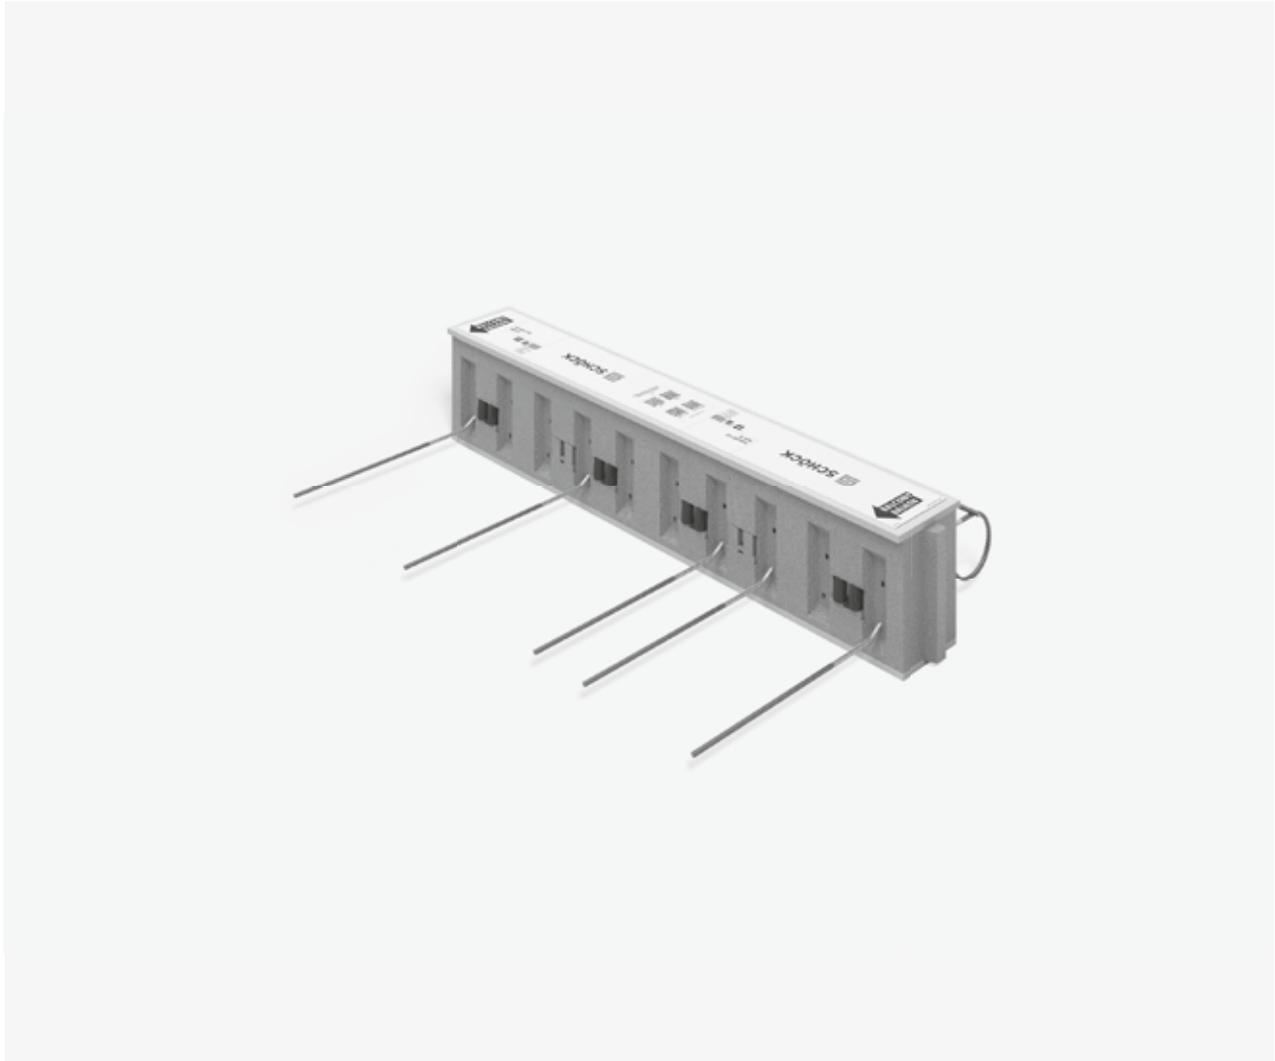


XT/T
type Q











Reinforced concrete – reinforced
concrete

Installation instructions

type Q (V1-V4)

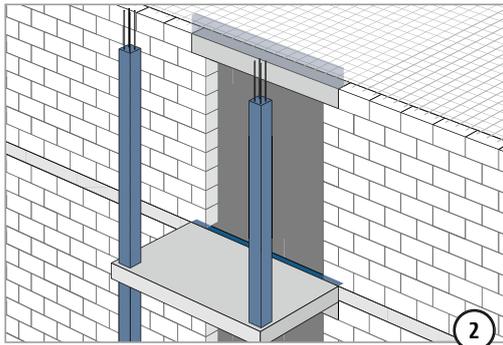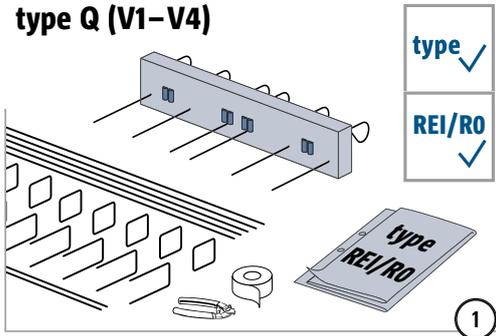






WARNING Hazard due to falling structural components with missing support! The balcony must always be supported statically designed. Remove temporary support only after installation of final support.

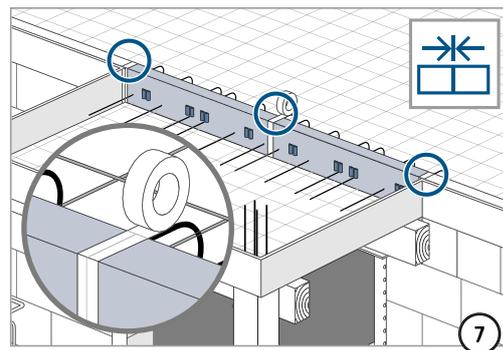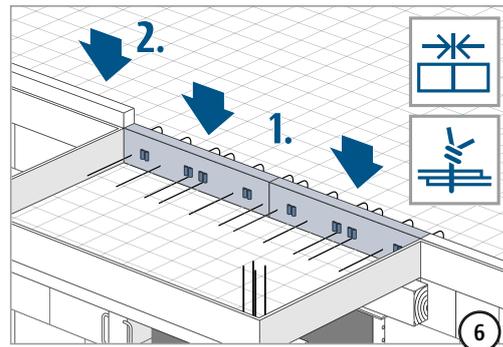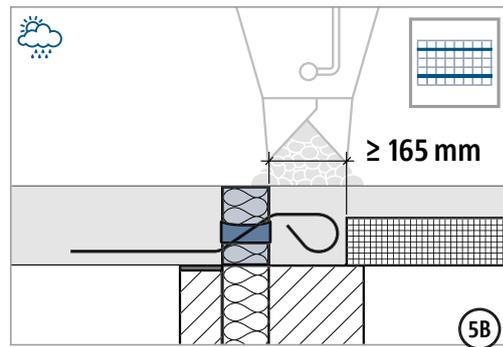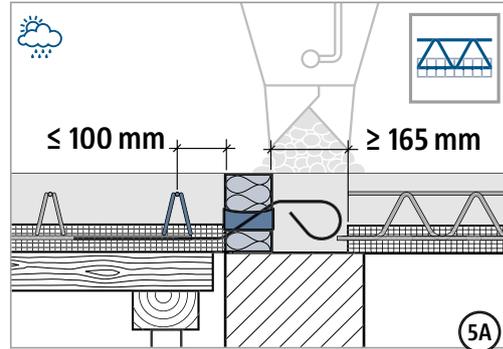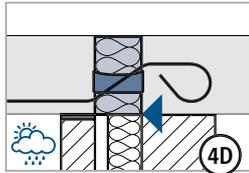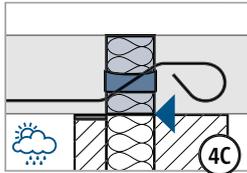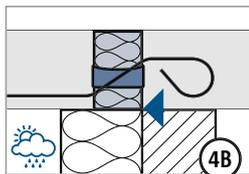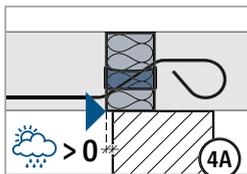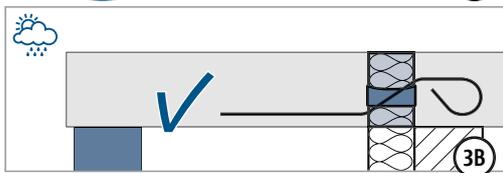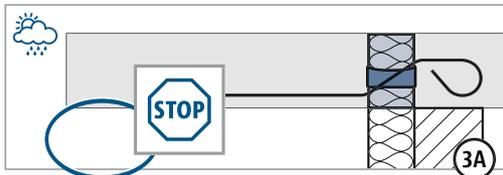

XT/T
type Q



Reinforced concrete – reinforced
concrete

Installation instructions






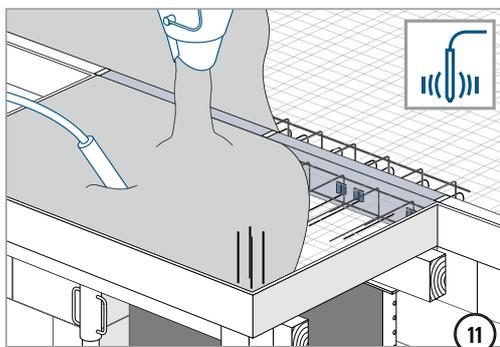
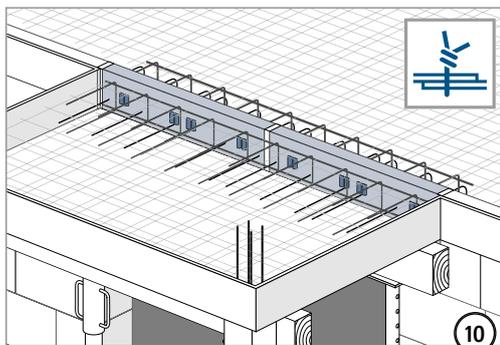
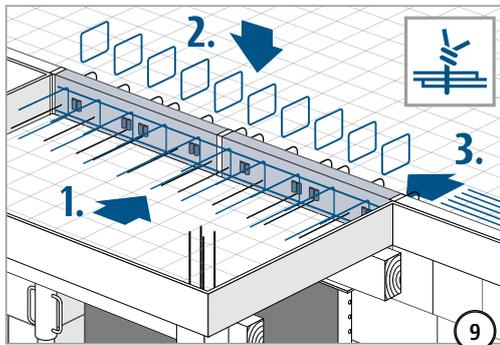
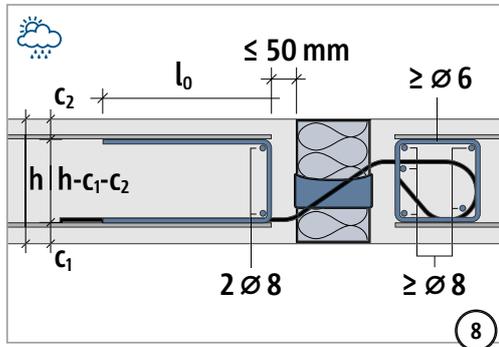
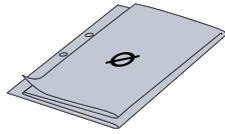
XT/T
type QReinforced concrete – reinforced
concrete

Installation instructions

type Q (V5-V12)

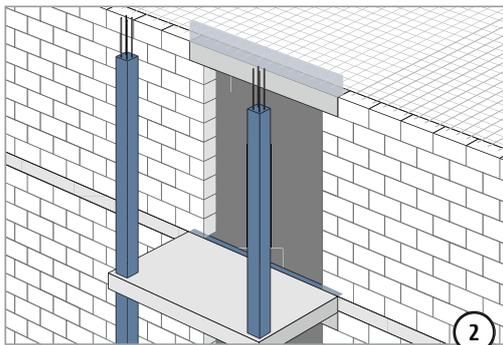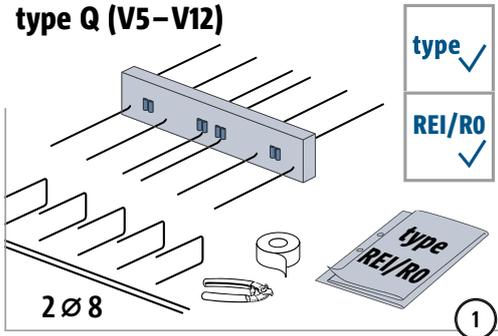




WARNING Hazard due to falling structural components with missing support! The balcony must always be supported statically designed. Remove temporary support only after installation of final support.

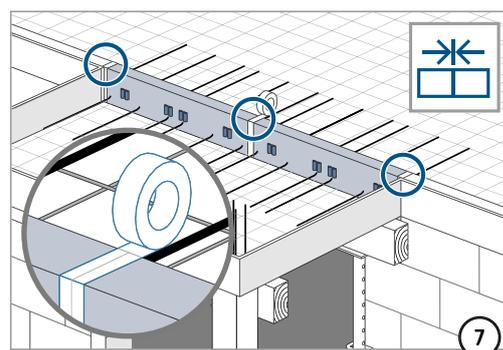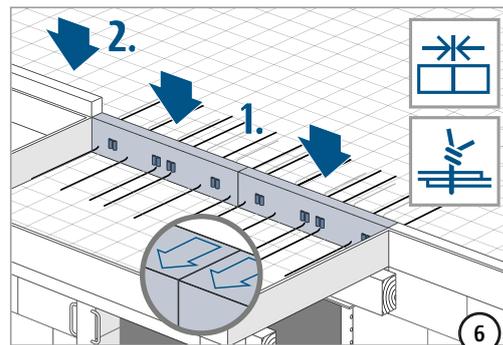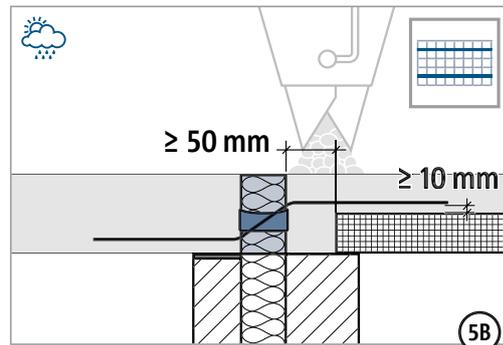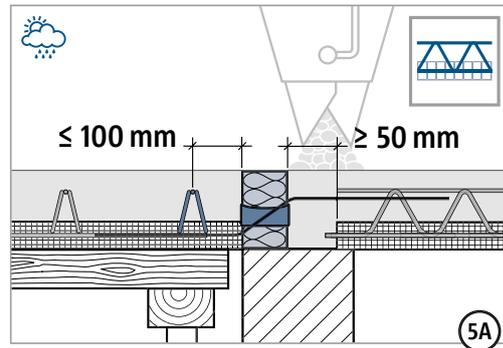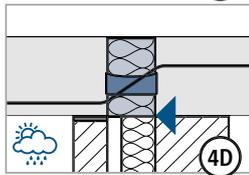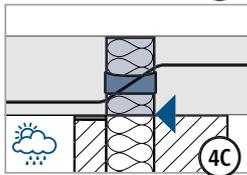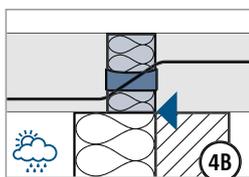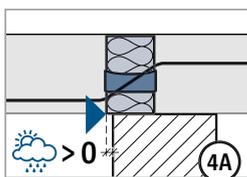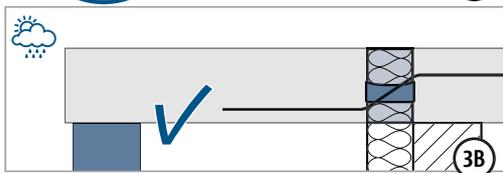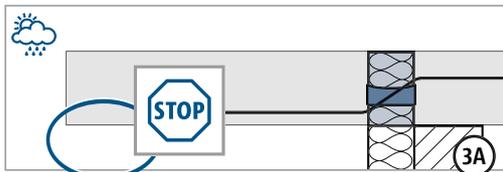

XT/T
type Q

Reinforced concrete – reinforced
concrete

Installation instructions

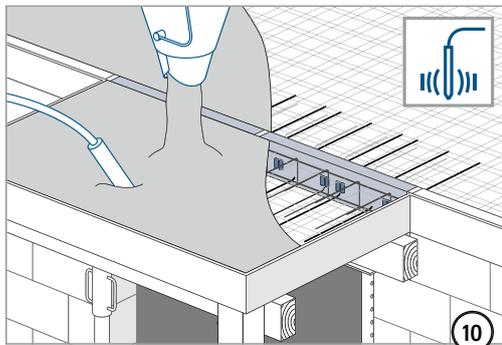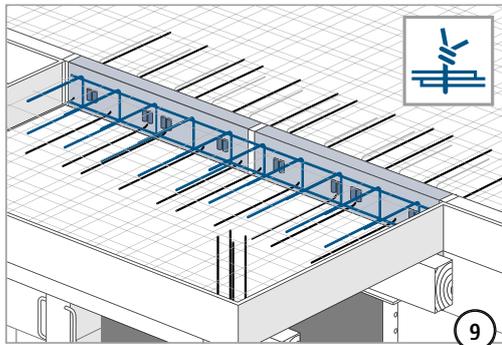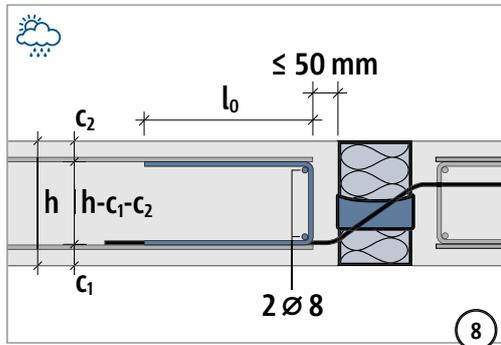

XT/T
type Q

Reinforced concrete – reinforced
concrete