

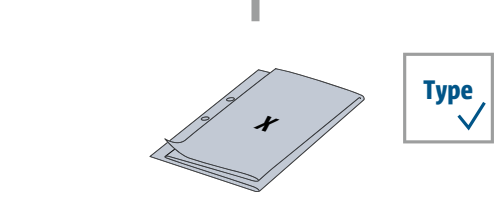
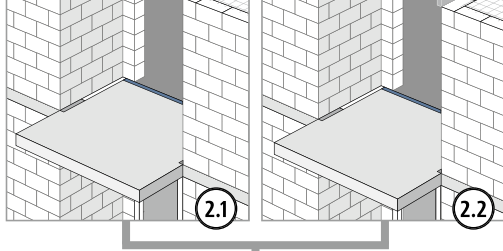
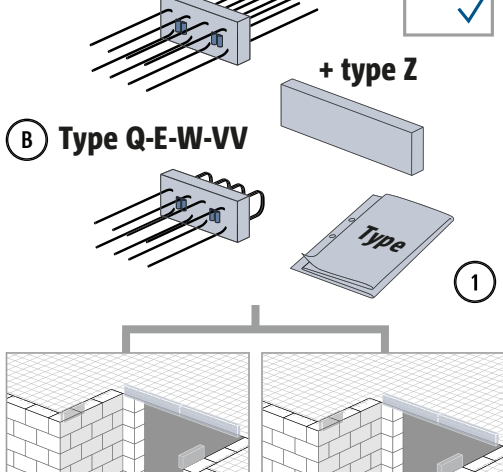


Isokorb® XT/T Type Q-E-VV, Q-E-W-VV

Installation instructions – In-situ concrete

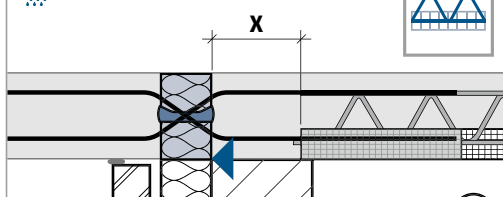

Type Q-E-VV

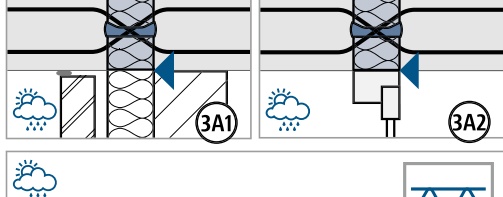

Type Q-E-W-VV

