

Isokorb® XT/T type KL

Installation instructions

Type KL

Type ✓

2 Ø 8

1

2

3A

3B

3C

3D

A

B

≤ 50 mm

2 Ø 8

4A

≤ 150 mm ≥ 100 mm

4B1

Without fail fill compression joint with in-situ concrete! Joint width ≥ 100 mm.

≥ 100 mm ≥ 100 mm

4B2

Without fail fill compression joint with in-situ concrete! Joint width ≥ 100 mm.

5

Step formwork in accordance with work plan.

6

7

8

9

10