


Schöck Isokorb® IQ type SK




IQ
type SK

Steel – reinforced concrete

Installation instructions – concrete construction



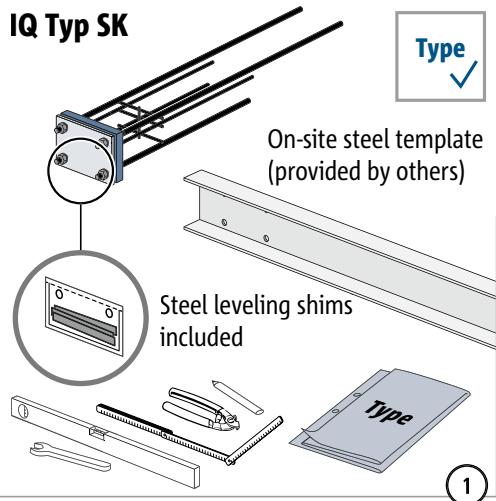


Do NOT cut through spacers.
Check that supplied steel leveling shims, timber face plate and nuts are securely attached!

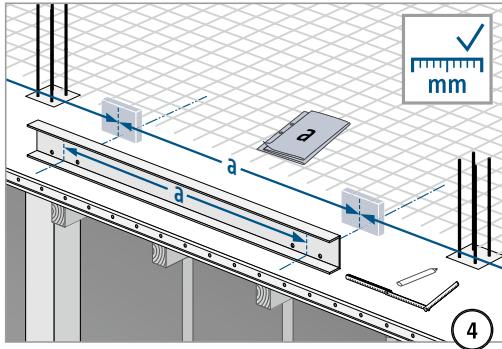


WARNING

Risk of falling parts if not properly secured! Plastic bag with steel leveling shims must be secured by both timber face plate and nuts at all times. Steel leveling shims for use by steel contractor / balcony installer only.

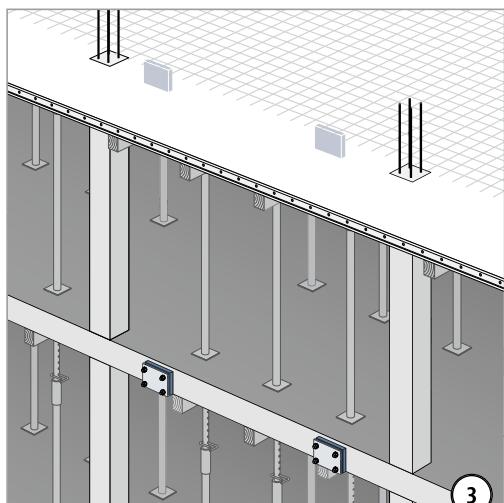
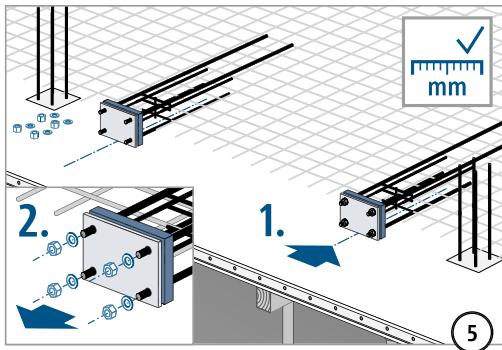
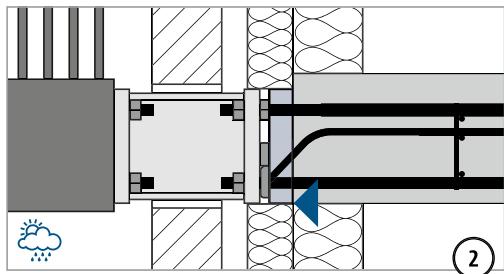


The order in which the slab reinforcement and Isokorb® M type SK elements are installed must be observed. If the arrangement and sequence of the slab reinforcement differs, the structural engineer's specifications are decisive.






! Before loosening the nuts: Check all screw threads for ease of movement. If necessary, clean and lubricate first!

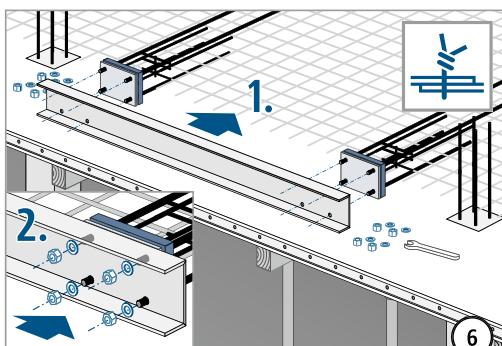

Installation instructions – concrete construction

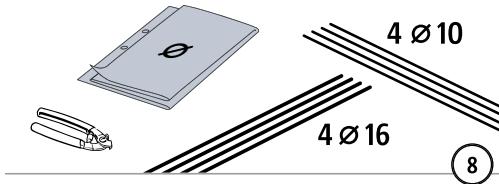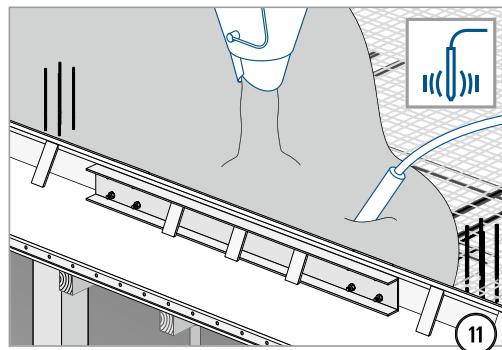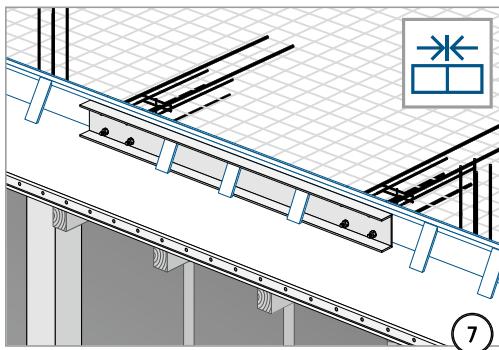

! If arrangement and order of slab reinforcement differs, the specs given by structural engineer are decisive. Additional reinforcement requirement (provided by others).

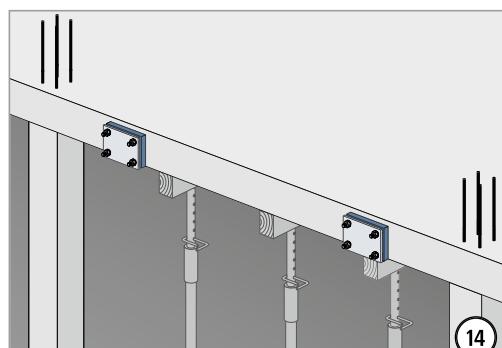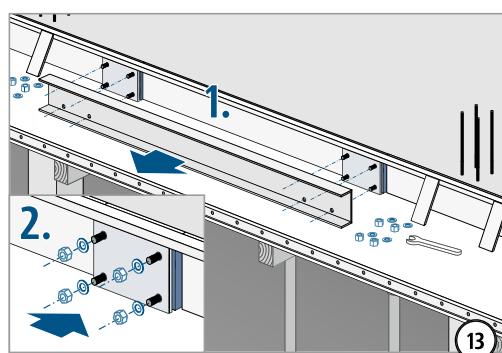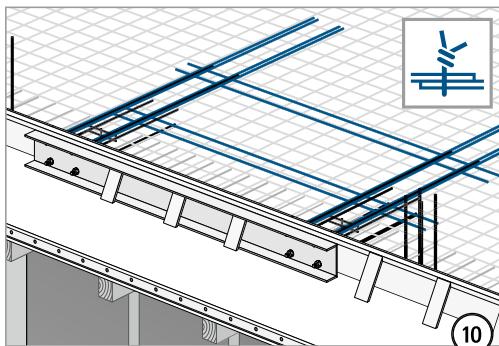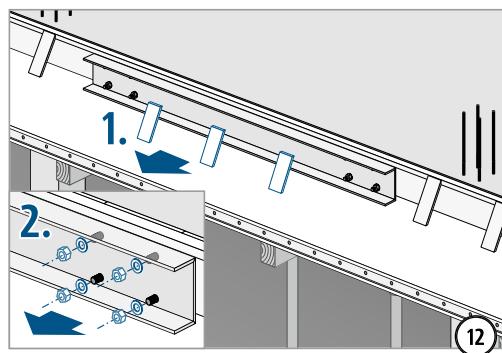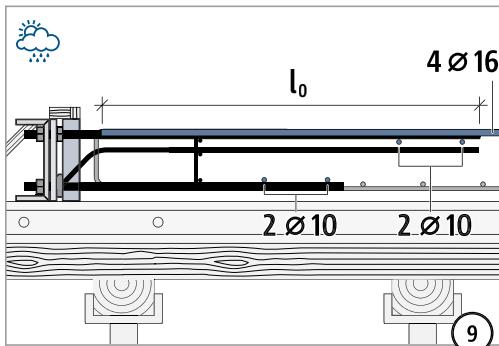IQ
type SK

Steel – reinforced concrete




After steel template and formwork stripped - check that supplied steel shims, timber face plate and nuts are securely reattached!


Installation instructions – stub brackets

IQ Typ SK

Stub bracket (provided by others)

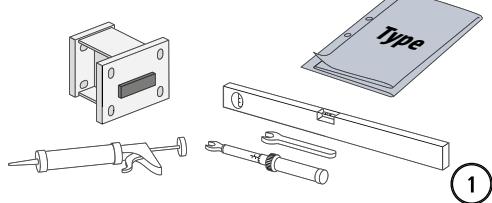


Before the endplates are manufactured, the bolt axes of the Isokorb® set in concrete should be measured on site.


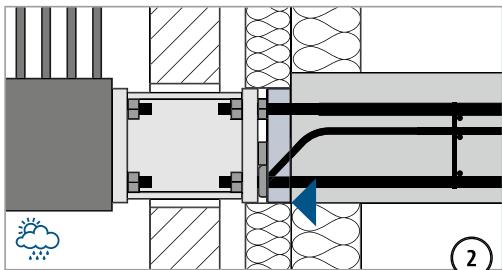


⚠ WARNING


Risk of falling parts if not properly secured! Steel leveling shims, timber face plate and nuts must be secured before and during the installation.

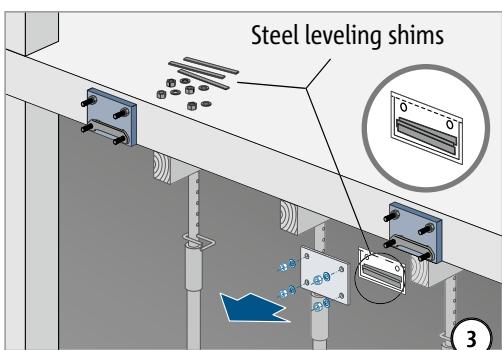



Before loosening the nuts: Check all screw threads for ease of movement. If necessary, clean and lubricate first!

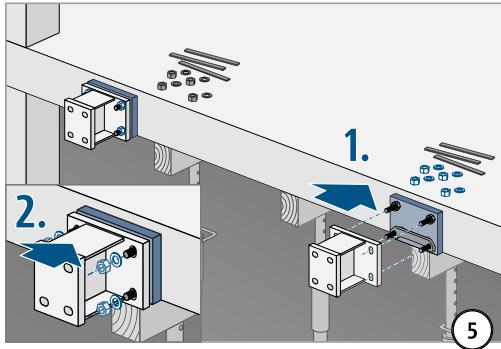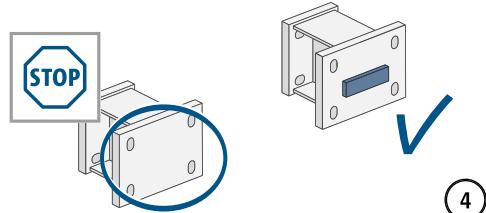


Check before balcony connection: The supplied steel leveling shims are absolutely necessary for the force-fit height compensation from the on-site butt-stop to the steel plate of the Isokorb®.

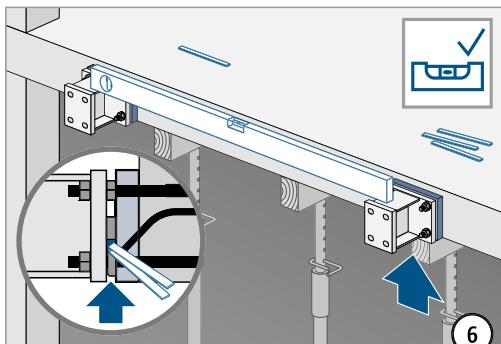


Isokorb® IQ Type	Screw thread (tension/compression)	Wrench size
SK-MM2-VV2	M22	32 mm

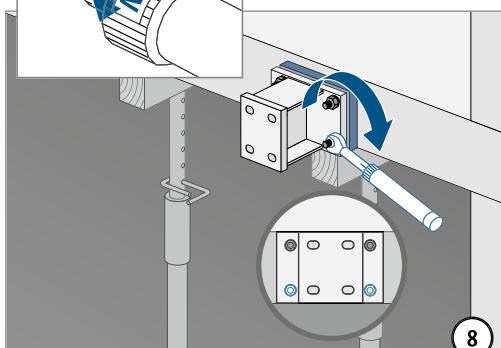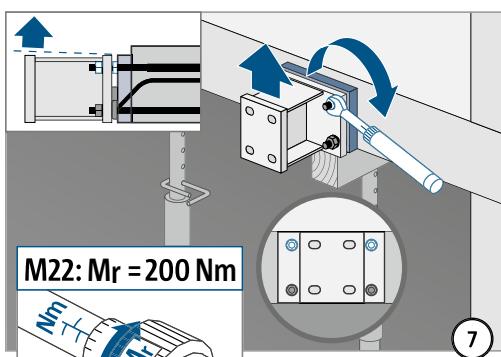

Installation instructions – stub brackets

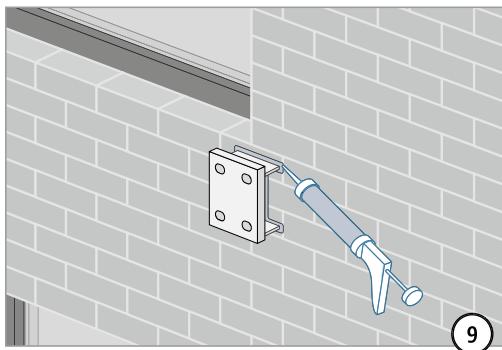

9

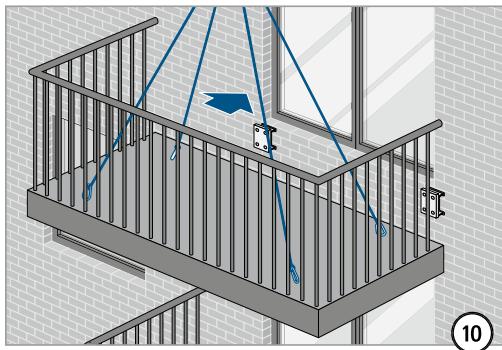

10