




# SCHÖCK

## Isokorb® T type C











### Installation instructions

#### Type C-M1


Type ✓

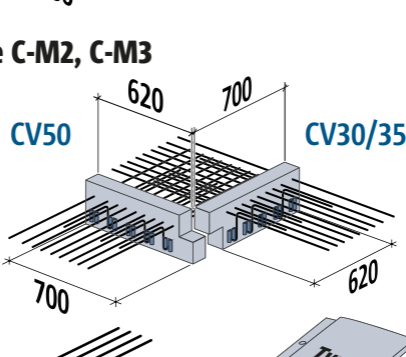

#### Type C-M2, C-M3

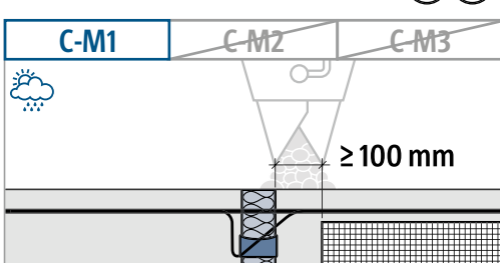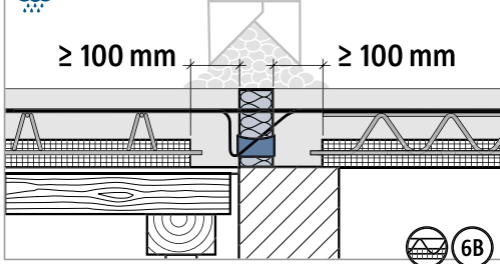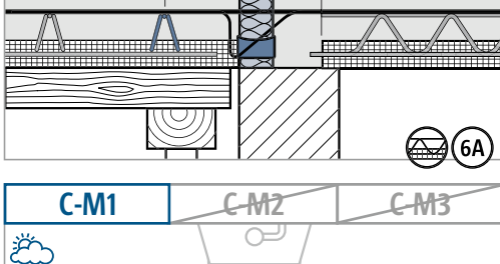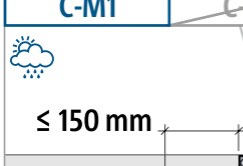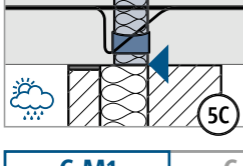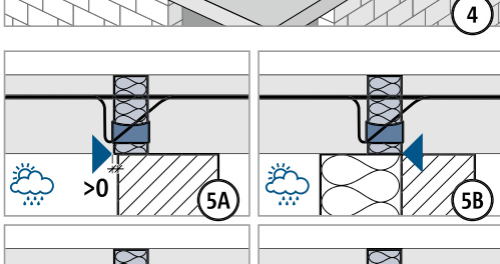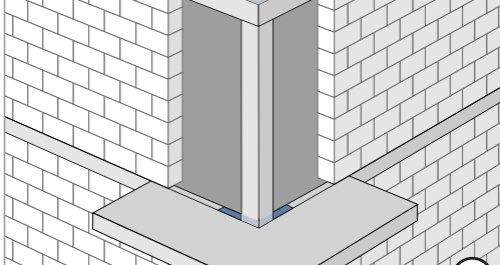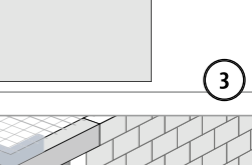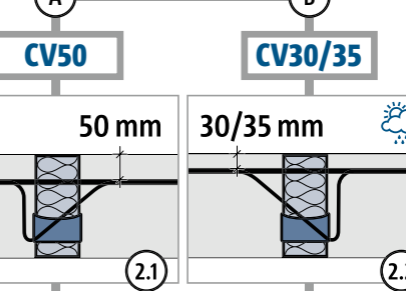

6A–6C: Be sure to fill the compression joint with in-situ concrete! Joint width  $\geq 100$  mm.

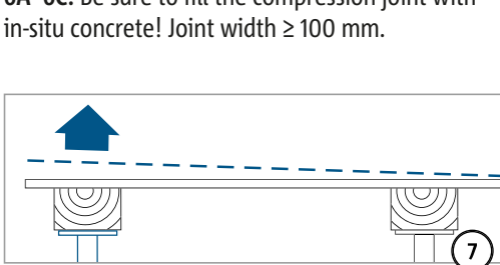

Step formwork in accordance with work plan.

